

Jeeves **TANGENT G CUPBOARD DRYER** information sheet.

- The JEEVES cupboard dryer is a low-cost solution to reduce dampness and mildew in poorly ventilated areas.
- The product is ideally suited to cupboards, wardrobes, boats, caravans, drying cabinets etc.
- Jeeves cupboard dryers gently heat and circulate air to reduce allergens and musty odors.
- The product is supplied with a convenient on/off switch and a 150cm power cord.
- VERY low energy consumption – only 20 Watts which is equivalent to 1/3 of a standard light bulb.
- A single cupboard heater is effective in a 1.5 cubic meter area. Several units can be used to cover larger areas.

POSITION

- Position and install the cupboard dryer on the floor or on the lower part of the rear wall of the affected area. Air is gently warmed and circulated resulting in a dry, mould free environment.

WARNINGS

- DO NOT cover the cupboard dryer as this prevents air circulation.
- In order to avoid a potential hazard, a damaged supply cord should be replaced by the manufacturer or similarly qualified person.

INSTALLATION METHOD

Have a registered electrician connect your cupboard dryer to a standard three-prong plug for use in a standard wall socket.

- Blue wire to neutral
- Brown wire to live (230V)
- Green / Yellow wire to earth

